



KING CANADA

DUST COLLECTOR

KC-3105KWRC SEE PAGE 16



MODEL: KC-3105C

INSTRUCTION MANUAL

COPYRIGHT ©1999 ALL RIGHTS RESERVED BY KING CANADA TOOLS INC.

IMPORTANT INFORMATION



THANK YOU FOR PURCHASING THIS KING CANADA PRODUCT

2-YEAR LIMITED WARRANTY FOR THIS DUST COLLECTOR	KING CANADA TOOLS OFFERS A 2-YEAR LIMITED WARRANTY FOR NON-COMMERCIAL USE.
--	---

PROOF OF PURCHASE

Please keep your dated proof of purchase for warranty and servicing purposes.

REPLACEMENT PARTS

Replacement parts for this tool are available at our authorized KING CANADA service centers across Canada. For servicing, contact or return to the retailer where you purchased your dust collector along with your proof of purchase.

LIMITED TOOL WARRANTY

KING CANADA makes every effort to ensure that this product meets high quality and durability standards. KING CANADA warrants to the original retail consumer a 2-year limited warranty as of the date the product was purchased at retail and that each product is free from defects in materials. Warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence or accidents, repairs or alterations and lack of maintenance. KING CANADA shall in no event be liable for death, injuries to persons or property or for incidental, special or consequential damages arising from the use of our products. To take advantage of this warranty, the product or part must be returned for examination by the retailer. Shipping and handling charges may apply. If a defect is found, KING CANADA will either repair or replace the product.

KING CANADA TOOLS INC. LACHINE, QUÉBEC, CANADA H8S 1A7



IMPORTANT SAFETY INSTRUCTIONS

WHEN USING YOUR DUST COLLECTOR, FOLLOW THE BASIC SAFETY PRECAUTIONS

⚠ WARNING: To reduce the risk of fire, electric shock or injury:

- * Read and understand this owners manual and all the labels on the dust collector before operating. Use only as described in this manual. To avoid personal injury or damage to your dust collector, use only recommended accessories.

Sparks inside the electrical parts can ignite flammable vapors or dust. To avoid fire or explosion:

- * Do not vacuum or use this dust collector near flammable or combustible liquids, gases, gasoline or other fuels, lighter fluid, cleaners, oil-based paints, natural gas, hydrogen, or explosive dusts like coal dust, magnesium dust, grain dust or gun powder.
- * Do not vacuum anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- * To avoid health hazards from vapors and dust, do not vacuum toxic materials.
- * Do not use or store near hazardous materials.
- * Do not use outdoors or on wet surfaces.
- * Put dust collector on a stable, level surface.
- * Keep vacuum hose and electric cord out of traffic areas.
- * Do not let the dust collector be used as a toy. Close attention is necessary when used by or near children.
- * Do not leave the dust collector plugged in. Unplug from the outlet when it is not in use and before servicing.
- * Use extra care when collecting dust on stairs.
- * To avoid injury from accidental starting, unplug power cord before changing or cleaning the filter/dust bag or the chip bag.
- * Do not use without the filter/dust bag and/or the chip bag in place.
- * Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- * Turn off controls before turning off.
- * Do not use with damaged cord, plug or other parts. If your dust collector is not working as it should, has missing parts, has been dropped, damaged, left outdoors, or dropped into water, send for servicing.
- * Do not pull or carry by the cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not run your dust collector over the cord. Keep cord away from heated surfaces.
- * Do not handle the electrical plug with wet hands.
- * Do not put any objects into the ventilation openings. Do not vacuum with any ventilation opening blocked, keep free of dust, lint, hair or anything that may reduce the air flow.
- * Keep hair, loose clothing, fingers and all other parts of the body away from openings and moving parts.
- * Extension cords in poor condition or that are too small can pose fire and shock hazards. When using an extension cord, make sure it is in good condition. See "Extension cords" section for proper sizes.
- * Connect to properly grounded outlet only. See "Grounding" section.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY BEFORE USING YOUR DUST COLLECTOR



⚠ CAUTION: If using this dust collector to keep airborne wood dust in heavy usage within acceptable limits, you must regularly monitor airborne dust and maintain the dust collector to avoid exceeding dust limits. Each application is unique. Your maintenance schedule must therefore be tailored to your specific use.

Safety is a combination of common sense, staying alert and knowing how your dust collector works.

⚠ WARNING: TO AVOID MISTAKES THAT COULD RESULT IN SERIOUS, PERMANENT INJURY, DO NOT CONNECT THE POWER CORD UNTIL THE FOLLOWING STEPS HAVE BEEN COMPLETED:

1. Assembly, mounting and alignment.
2. Learn the function and proper use of the "ON/OFF" switch.
3. Read and understand all instructions and operating procedures throughout the manual.

BEFORE EACH USE:

1. Inspect your dust collector. If any parts are missing, bent, or fail in any way, or any electrical components do not work properly, turn off the dust collector, remove the switch key and remove the power cord from the power supply. Replace damaged, missing or failed parts before using the dust collector again.
2. Plan your work to protect your eyes, hands, face, ears and body.

3. **WEAR SAFETY GOGGLES. "FORESIGHT IS BETTER THAN NO SIGHT".** Wear safety goggles, not glasses, that comply with ANSI Z87.1. Operating any power tool can result in foreign objects being thrown into the eyes which can result in permanent eye damage.

4. When cleaning the dust collector bags, wear a dust mask.

This dust collector is specifically designed to capture sawdust and wood chips at the source. The fine dust is filtered by the upper dust bag while the heavier particles settle in the lower dust bag for easy removal. **DO NOT USE AS A VACUUM.**

⚠ CAUTION: The blower housing contains a high speed fan blade that can amputate fingers, grab loose clothing and neckties, or propel dust at high velocities. **DO NOT OPERATE WITHOUT ALL PARTS IN PLACE.**

Do not attempt to clean, remove dust bags or service while in operation. Disconnect from power source.

IMPORTANT NOTE: Static shocks are common in dry areas or when the relative humidity of the air is low. To reduce the frequency of static shocks in your home, the best remedy is to add moisture to the air with a console or installed humidifier.



GENERAL SAFETY INSTRUCTIONS FOR POWER TOOLS

1. KNOW YOUR TOOL

Read and understand the owners manual and labels affixed to the tool. Learn its application and limitations as well as its specific potential hazards.

2. GROUND THE TOOL.

This tool is equipped with an approved 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding type receptacle. The green conductor in the cord is the grounding wire. **NEVER** connect the green wire to a live terminal.

3. KEEP GUARDS IN PLACE.

Keep in good working order, properly adjusted and aligned.

4. REMOVE ADJUSTING KEYS AND WRENCHES.

Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.

5. KEEP WORK AREA CLEAN.

Cluttered areas and benches invite accidents. Make sure the floor is clean and not slippery due to wax and sawdust build-up.

6. AVOID DANGEROUS ENVIRONMENT.

Don't use power tools in damp or wet locations or expose them to rain. Keep work area well lit and provide adequate surrounding work space.

7. KEEP CHILDREN AWAY.

All visitors should be kept a safe distance from work area.

8. MAKE WORKSHOP CHILD-PROOF.

-with padlocks, master switches or by removing starter keys.

9. USE PROPER SPEED.

A tool will do a better and safer job when operated at the proper speed.

10. USE RIGHT TOOL.

Don't force the tool or the attachment to do a job for which it was not designed.

11. WEAR PROPER APPAREL.

Do not wear loose clothing, gloves, neckties or jewelry (rings, watch) because they could get caught in moving parts. Non-slip footwear is

recommended. Wear protective hair covering to contain long hair. Roll up long sleeves above the elbows.

12. ALWAYS WEAR SAFETY GLASSES.

Always wear safety glasses (ANSI Z87.1). Everyday eyeglasses only have impact resistant lenses, they are **NOT** safety glasses. Also use a face or dust mask if cutting operation is dusty.

13. DON'T OVERREACH.

Keep proper footing and balance at all times.

14. MAINTAIN TOOL WITH CARE.

Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.

15. DISCONNECT TOOLS.

Before servicing, when changing accessories or attachments.

16. AVOID ACCIDENTAL STARTING.

Make sure the switch is in the "OFF" position before plugging in.

17. USE RECOMMENDED ACCESSORIES.

Consult the manual for recommended accessories. Follow the instructions that accompany the accessories. The use of improper accessories may cause hazards.

18. NEVER STAND ON TOOL.

Serious injury could occur if the tool tips over. Do not store materials such that it is necessary to stand on the tool to reach them.

19. CHECK DAMAGED PARTS.

Before further use of the tool, a guard or other parts that are damaged should be carefully checked to ensure that they will operate properly and perform their intended function. Check for alignment of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other parts that are damaged should be properly repaired or replaced.

20. NEVER LEAVE MACHINE RUNNING UNATTENDED.

Turn power "OFF". Don't leave any tool running until it comes to a complete stop.

SPECIFICATIONS




MOTOR

HORSEPOWER.....	1-1/2
VOLTAGE	110V / 220V
AMPERAGE	12/6A
R.P.M.....	3450
Hz	60
PHASE	1
POLE	2
CLASS	E
AIR SUCTION CAPACITY	1200 C.F.M.
FAN DIAMETER	9-1/2"
HOSE DIAMETER	5"
INLET HOSE DIAMETER	4"
BAG QUANTITY & SIZE.....	2@ 20" X 32"



YOUR DUST COLLECTOR

1. DUST COLLECTOR BAG
2. DUST FILTER
3. BELT
4. FILTER BAG
5. BASE PLATE
6. INLET COVER
7. CASTER
8. VENTILATION CYLINDER
9. HOSE

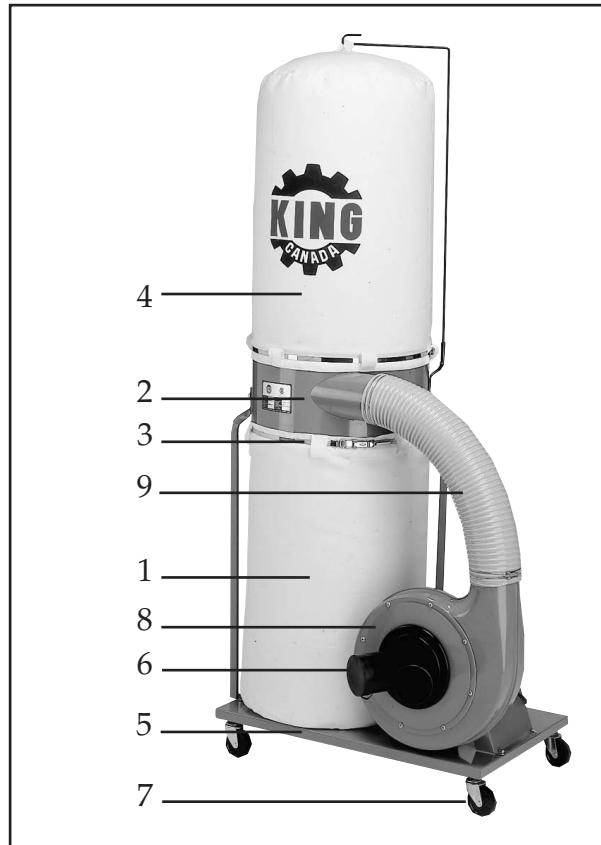


UNPACKING

1. Finish removing all the contents of the shipping carton.
2. Report any damage to your retailer.
3. Do not discard any shipping materials until after the dust collector has been assembled and is running properly.

Contents of the shipping carton

- | | |
|----------------------|----------------------|
| 1 Bag hanger | 2 Hose clamps |
| 1 Base | 2 Retainer straps |
| 1 Hanger bracket | 1 Hardware bag |
| 1 Hose | 4 Casters |
| 3 Support brackets | 1 Inlet cover |
| 1 Motor/fan assembly | 1 Hose adapter |
| 1 Collector bag | 1 Instruction manual |
| 1 Filter bag | |

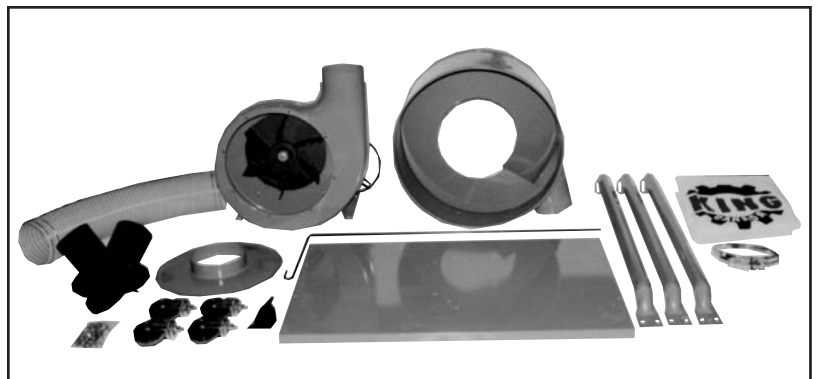

ASSEMBLY



1. Install the four casters to the under side as illustrated in Fig.1. Do not remove the lock washers and nuts from caster roller shafts; these act as spacers. Insert roller shaft into threaded hole on the underside of the base, turn until it is snug, then tighten nut with wrench.

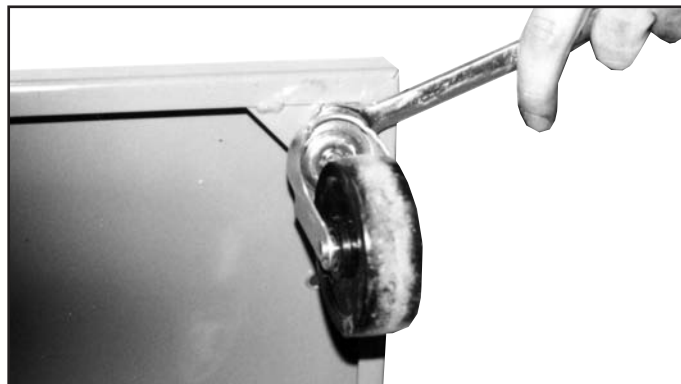


FIGURE 1

2. Place base with rollers on the ground and attach the motor and fan assembly to the base using 4 hex. bolts and 4 flat washers. (Fig.2)

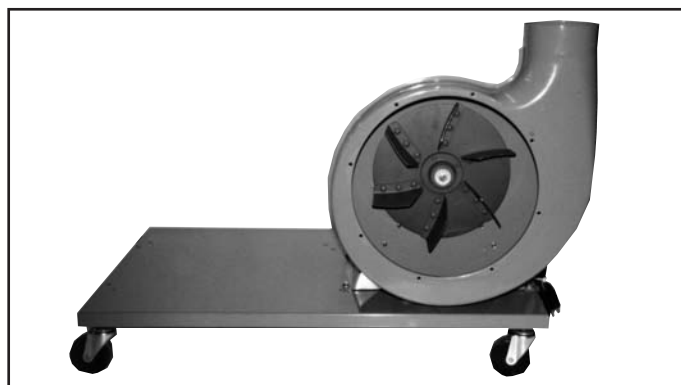


FIGURE 2

3. Attach inlet cover to fan housing using 8 pan hd. screws. (Fig.3).



FIGURE 3

4. Attach the three support brackets (Fig.4) to the base using 6 hex. bolts and 6 flat washers. Hand tighten only at this point.



FIGURE 4



ASSEMBLY

5. Install housing (A) to three support brackets (B) using 6 hex. bolts, 12 flat washers and 6 hex. nuts. Make sure the hose opening faces the fan housing. Before attaching the third support bracket, place hanger bracket (C) between the support bracket and the housing, as illustrated in Fig.5. Tighten all bracket nuts and bolts at this time.

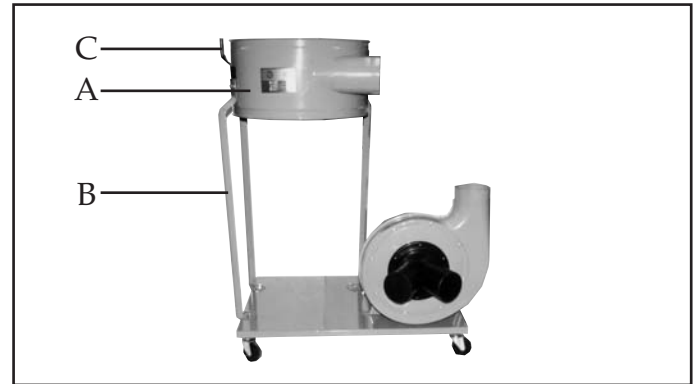


FIGURE 5

6. Attach hose adapter to inlet cover on motor assembly. Press the black plastic cover into its hole at the rear of the motor bracket (Fig.6).



FIGURE 6

7. Slide hose clamps onto each end of the hose. Attach hose between the fan housing and the collector housing. Tighten clamps to secure hose (Fig.7).



FIGURE 7

8. Insert bag hanger into hanger bracket and then hook top dust bag to hanger. Insert retainer strap through keeper straps and fasten to collector housing. Repeat this operation for the lower dust bag (Fig.8).

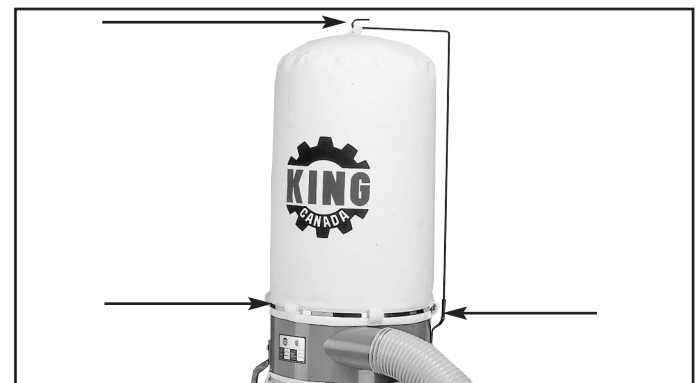


FIGURE 8

ELECTRICAL CONNECTIONS



⚠️ WARNING

ALL ELECTRICAL CONNECTIONS MUST BE DONE BY A QUALIFIED ELECTRICIAN. FAILURE TO COMPLY MAY RESULT IN SERIOUS INJURY!

ALL ADJUSTMENTS OR REPAIRS MUST BE DONE WITH THE DUST COLLECTOR DISCONNECTED FROM THE POWER SOURCE. FAILURE TO COMPLY MAY RESULT IN SERIOUS INJURY!

THIS DUST COLLECTOR IS RATED 110V/220V AND COMES FROM THE FACTORY PREWIRED AT 110V.

Before hooking up to the power source, make sure that the switch is in the "OFF" position.

POWER SUPPLY

⚠️ WARNING: YOUR DUST COLLECTOR MUST BE CONNECTED TO A 110V, 15-AMP, BRANCH CIRCUIT AND USE A 15-AMP TIME DELAY FUSE OR CIRCUIT BREAKER. FAILURE TO CONNECT IN THIS WAY CAN RESULT IN INJURY FROM SHOCK OR FIRE.

Your dust collector must be properly grounded. Not all outlets are properly grounded. If you are not sure if your outlet is properly grounded, have it checked by a qualified electrician.

⚠️ WARNING: IF NOT PROPERLY GROUNDED, THIS DUST COLLECTOR CAN CAUSE ELECTRICAL SHOCK, PARTICULARLY WHEN USED IN DAMP LOCATIONS. TO AVOID SHOCK OR FIRE, IF THE POWER CORD IS WORN OR DAMAGED IN ANY WAY, HAVE IT REPLACED IMMEDIATELY.

GROUNDING

This dust collector must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current, to reduce the risk of electric shock. This dust collector is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠️ WARNING: TO MAINTAIN PROPER GROUNDING OF YOUR DUST COLLECTOR, DO NOT REMOVE OR ALTER THE GROUNDING PRONG IN ANY MANNER.

110V OPERATION

As received from the factory, your dust collector is ready to run for 110V operation. When this dust collector is wired at 110V, it is intended for use on a circuit that has an outlet and a plug which looks like the one illustrated in Fig.A.

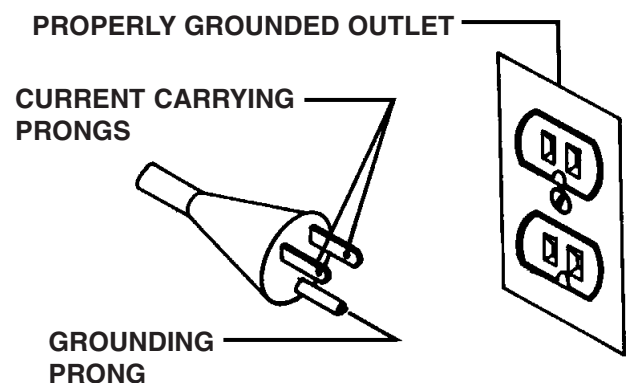


FIGURE A

⚠️ WARNING: DO NOT USE A TWO-PRONG ADAPTOR FOR THEY ARE NOT IN ACCORDANCE WITH LOCAL CODES AND ORDINANCES. NEVER USE IN CANADA.



ELECTRICAL CONNECTIONS

220V OPERATION

If 220V, single phase operation is desired, the following instructions must be followed:

1. Disconnect the machine from its power source.
2. The dust collector comes with four motor leads that are connected for 110V operation as shown in Fig. B. Reconnect these four motor leads for 220V operation, as shown in Fig. C.
3. The 110V plug supplied with the dust collector must be replaced with a CSA listed plug suitable for 220V operation. This plug is illustrated in Fig. D. Contact your authorized service center or qualified electrician to install the plug and to change the connections from 110V to 220V. The dust collector must comply with all local and national codes after the 220V plug is installed.
4. A dust collector with a 220V plug should only be connected to an outlet having the same configuration as illustrated by the grounded outlet box in Fig. D. No adaptor is available or should be used for 220V operation.

110V

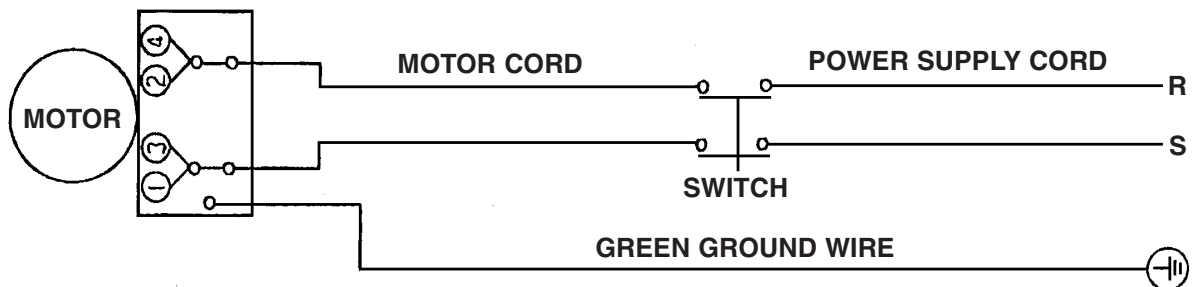


Figure B

220V

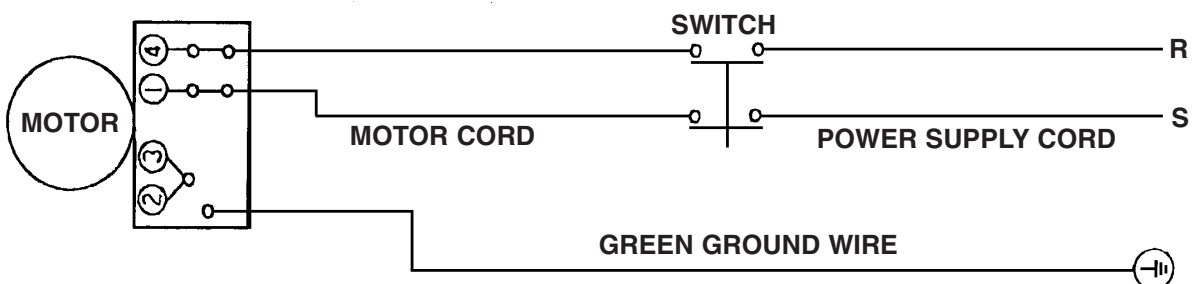


Figure C

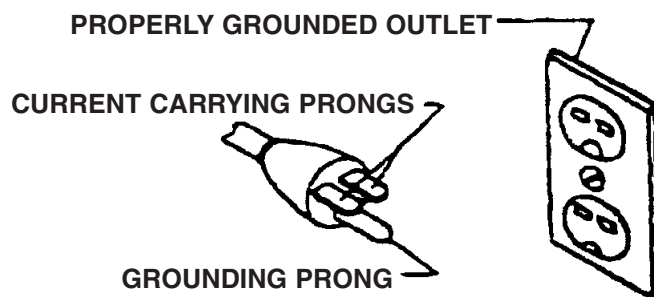


Figure D

ELECTRICAL CONNECTIONS



EXTENSION CORDS

The use of any extension cord will cause some loss of power. Use the following table to determine the minimum wire size (A.W.G.-American Wire Gauge) extension cord. Use only 3-wire extension cords which have 3-prong grounding type plugs and 3-hole receptacles which accept the tool's plug.

LENGTH OF CONDUCTOR

0-25 FEET
26-50 FEET
51-100 FEET

WIRE SIZES REQUIRED (AMERICAN WIRE GAUGE)

110V LINES

NO.16
NO.14
NO.12

For circuits that are further away from the electrical circuit box, the wire size must be increased proportionately in order to deliver ample voltage to the dust collector motor.


ON/OFF SWITCH

On the rear of the motor housing above the handle is the switch box. The ON/OFF switch has the ability to be turned "ON" when the *Red Key* is properly installed. Switch to the "ON" position by moving the switch upward. To put the switch in the "OFF" position, move the switch downward. Remove the *Key* from the switch whenever the dust collector is turned "OFF". Place the *Starter Key* in a safe place out of reach of children.


⚠ WARNING: THE DUST COLLECTOR CAN START ACCIDENTALLY OR BE USED BY CHILDREN WHEN THE *STARTER KEY* IS LEFT IN THE SWITCH. ALWAYS REMOVE THE *STARTER KEY* WHEN THE DUST COLLECTOR IS "OFF".

⚠ WARNING: THE DUST COLLECTOR WILL START IMMEDIATELY FOLLOWING A BLACKOUT ONLY IF THE SWITCH WAS LEFT "ON". IN SUCH CASES, ALWAYS TURN THE SWITCH "OFF" AND REMOVE THE KEY.


**TURNING
SWITCH "ON"**

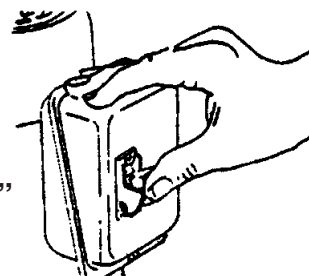

**TURNING
SWITCH "OFF"**

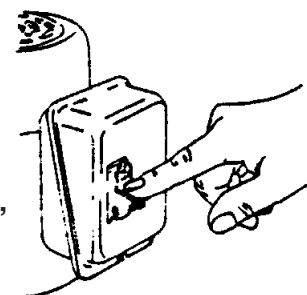

**REMOVING
STARTER KEY**

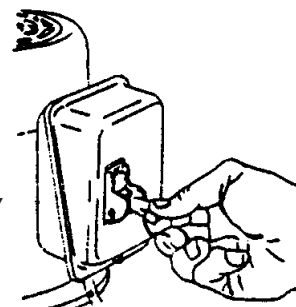



MAINTENANCE

MOTOR

Excessive dust in the motor could cause excessive heat in the motor.

Every effort should be made to prevent foreign material from entering the motor. When operating under conditions likely to permit accumulations of dust, dirt or waste within the motor, a visual inspection should be made at frequent intervals. Accumulations of dry dust can usually be blown out successfully.

Note: Motors used on woodworking tools are particularly susceptible to the accumulation of sawdust and wood chips and should be blown out or “vacuumed” frequently to prevent the interference with normal motor ventilation.

To remove dust, blow off motor with a low pressure air hose.

⚠ CAUTION: TO AVOID INJURY OR ADVERSE REACTION TO DUST, A HIGH PRESSURE HOSE SHOULD NOT BE USED ESPECIALLY IN POORLY VENTILATED AREAS.

The operator performing this cleaning function should wear safety glasses and a filter mask.

Do not use if power cord becomes worn or frayed.

If any servicing (other than the above cleaning) becomes necessary, it should be performed by an authorized service center.

Note: The speed of this motor cannot be regulated or changed.

Operational hints

During the first use and after cleaning, the filter bag may allow some dust to escape. This is normal and will stop after a short period of time.

⚠ CAUTION: WEARING A PARTICLE MASK/RESPIRATOR FOR PROTECTION AGAINST FINE DUST PARTICLES DURING CLEANING IS HIGHLY RECOMMENDED.

Clean both the filter and the collection bags frequently to keep the dust collectors' performance at its optimum. To clean:

1. Disconnect the machine from the power source.
2. Loosen the retaining strap, remove the bag from the housing and empty contents.
3. Turn the bag inside out and shake vigorously.
4. Turn the bag inside in and re-attach to the housing using the retainer strap to secure.
5. Connect the machine to the power source.

Use the proper type of hose to connect the dust collector to the machine being operated. A dryer vent hose is not acceptable for this purpose.

TROUBLESHOOTING



PROBLEM	PROBABLE CAUSE	REMEDY SUGGESTED
Motor will not run.	1. Defective cord, plug, switch and/or motor. 2. Blown fuse.	1. Consult service. Any attempt to repair this motor may create a hazard unless repair is done by a qualified service technician. Repair service is available at your nearest service center. 2. Check for blown fuses and replace with fuse of proper capacity.
Excessive sawdust in air.	1. Loose connectors. 2. Filter/dust bag and/or chip collector bag releasing sawdust.	1. Tighten connections. 2.a. Sawdust trapped between clamp bag and housing. b. Lower bag is hung up on sawdust shoot extension. Reposition chip bag properly.
Excessive impeller noise.	1. Picked up large wood chips and debris. 2. Loose impeller. 3. Rubbing impeller.	1. Do not pick up metal or ferrous materials. Stop the machine and the material will fall to the bottom of the inlet tube. 2. Unplug dust collector prior to disassembly. Hazardous moving parts inside. Attach inlet guard before plugging in. Use a piece of wood to free impeller. 3. Consult service to repair loose or rubbing impeller. A repair to the housing may create a hazard unless it is done by a qualified service technician. Servicing is available at your nearest service center.
Excessive noise.	1. Motor.	1. Have the motor checked by a qualified service technician.
Motor fails to develop full power. NOTE: LOW VOLTAGE (Power output of motor decreases rapidly with decrease in voltage at the motor terminals.)	1. Circuit overloaded with lights, appliances and other motors. 2. Undersized extension cord or extension cord is too long. 3. General overloading of power company facilities.	1. Do not use other appliances or motors on the same circuit as your dust collector. 2. Increase the wire size on extension cord, or reduce the length of the extension cord. 3. Request a power check from your power company.
Motor starts slowly or fails to come up to speed.	1. Low voltage. 2. Windings are burned out or open. 3. Starting switch will not operate. Capacitor is bad.	1. Request voltage check from your power company. 2. Have motor repaired or replaced by a qualified service technician. 3. Have capacitor replaced by a qualified service technician.
Motor overheats	1. Motor overloaded. 2. Improper cooling, air circulation is restricted through motor due to sawdust accumulation.	1. Clean out sawdust to provide normal air circulation through the motor. See "Maintenance" section in this manual.



TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	REMEDY SUGGESTED
Motor stalls (resulting in blown fuses or tripped circuit breakers).	1. Voltage is too low to permit the motor to reach operating speed. 2. Fuses or circuit breakers do not have sufficient capacity.	1. Request voltage check from your power company. 2. Install proper sized fuses or circuit breakers.
Frequent opening of fuses or circuit breakers.	1. Motor overheated. 2. Fuses or circuit breakers do not have sufficient capacity.	1. Install proper sized fuses or circuit breakers.

PARTS DIAGRAM & PARTS LISTS

Refer to the Parts section of the King Canada web site for the most updated parts diagram and parts list.



KING CANADA

1200 CFM DUST COLLECTOR WITH REMOTE POWER CONTROL SYSTEM INSTRUCTIONS FOR KC-3105KWRC

2-YEAR LIMITED WARRANTY FOR KING CANADA PRODUCTS

PROOF OF PURCHASE

Please keep your dated proof of purchase for warranty and servicing purposes.

REPLACEMENT PARTS

Replacement parts for this improved product are available at our authorized King Canada service centers across Canada. Refer to the KC-3105C service manual for full diagrams and parts list.

LIMITED TOOL WARRANTY

King Canada makes every effort to ensure that this product meets high quality and durability standards. King Canada warrants to the original retail consumer a 2-year limited warranty as of the date the product was purchased at retail and that each product is free from defects in materials. Warranty does not apply to defects due directly or indirectly to misuse, abuse, normal wear and tear, negligence or accidents, repairs done by an unauthorized service center, alterations and lack of maintenance. King Canada shall in no event be liable for death, injuries to persons or property or for incidental, special or consequential damages arising from the use of our products.

To take advantage of this limited warranty, return the product at your expense together with your dated proof of purchase to an authorized King Canada service center. Contact your retailer or visit our web site at www.kingcanada.com for an updated listing of our authorized service centers. In cooperation with our authorized serviced center, King Canada will either repair or replace the product if any part or parts covered under this warranty which examination proves to be defective in workmanship or material during the warranty period.

KING CANADA INC. DORVAL, QUÉBEC, CANADA H9P 2Y4
www.kingcanada.com

COPYRIGHT © 2007 ALL RIGHTS RESERVED BY KING CANADA TOOLS INC.



Set up and operation

Remote control type Infrared
Receiving angle 120°
Use Indoors only

Electrical warning! Refer to the KC-3105C instruction manual for electrical information.

Turning the KC-3105KWRC On & Off using the Remote Power Control System

The remote power control can be operated from the system panel (A) Fig.1 hardwired to the dust collector motor or the remote control (B). Plug the motor power cord into an appropriate power source and press the "On" button (A-1). The dust collector will operate until the "Off" button (A-2) is pressed.

Using the Timer feature

Once the dust collector is running, press the "Timer" button (A-3), everytime you press the timer button the display number will increase by one minute and can be set up to 99 minutes. Hold the timer button to scroll quickly up towards 99 minutes, going past 99, minutes will restart the minute count at zero (00). The dust collector will operate for the amount of time set on the timer, once the zero (00) count is reached, the dust collector will automatically stop. If you press the "Off" button while the timer is engaged, the dust collector will turn off and the timer will be reset to zero (00).

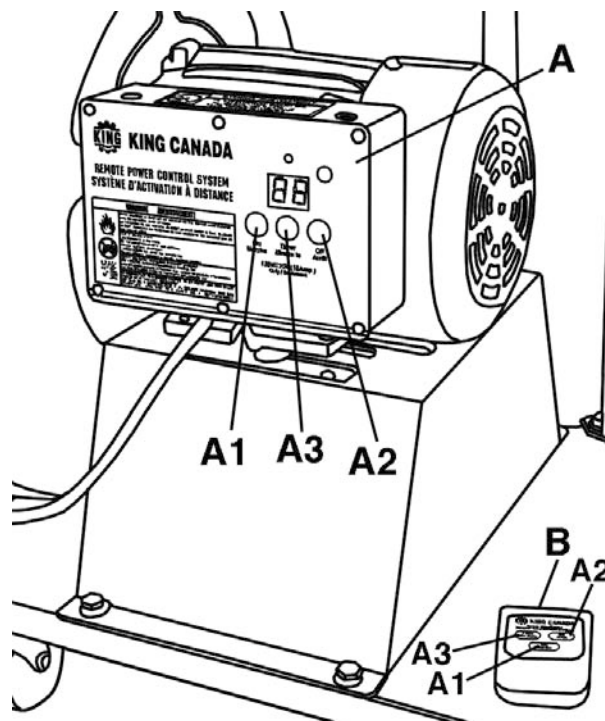


Figure 1



ELECTRICAL DIAGRAMS FOR KC-3105KWRC (110V AND 220V)

Important note: For 220V operation. A 220V plug is not supplied with this dust collector and must be purchased at your local hardware store. The 220V plug must be a CSA listed plug suitable for 220V operation. This plug is illustrated in Fig.2 below. Contact your authorized service center or qualified electrician to install the plug.

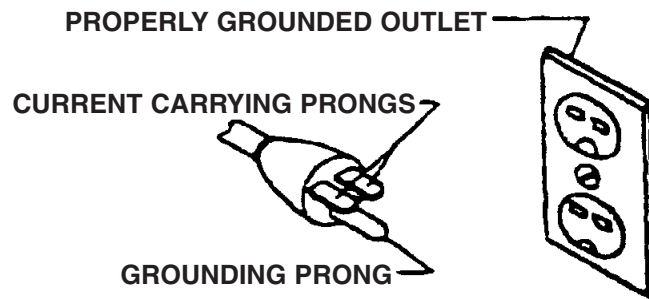
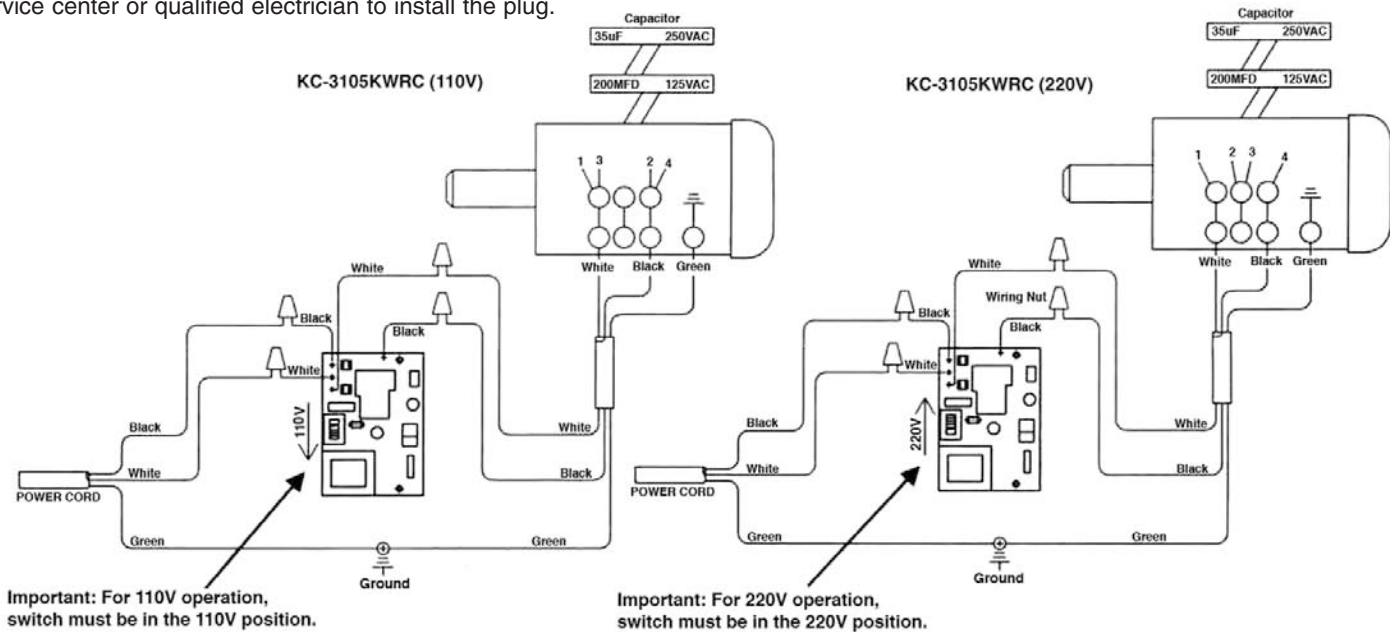


Figure 2

PARTS DIAGRAM & PARTS LISTS

Refer to the Parts section of the King Canada web site for the most updated parts diagram and parts list.